

KABELFERNSEHANLAGE URSERN

Frequenztabelle Fernsehprogramme

<u>Nr.</u>	<u>Sender</u>	<u>Frequenz</u> (MHz)	<u>Kanal</u>
	SF 1	175.25	K05
	SF 2	133.25	S05
	SF info	551.25	K31
	Star TV	161.25	S09
	ARD	189.25	K07
	ZDF	224.25	K12
	ORF 1	203.25	K09
	3+	210.25	K10
	PRO 7	294.25	S20
	SAT 1	154.25	S08
	RTL	245.25	S13
	RTL 2	335.25	S25
	Super RTL	399.25	S33
	VOX	343.25	S26
	Kabel 1	391.25	S32
	3sat	266.25	S16
	Tele 1 (Tele Tell)	140.25	S06
	Tele Züri	423.25	S36
	Eurosport	273.25	S17
	Schweizer Sportfernsehen SSF	319.25	S23
	KiKa <i>(gleicher Kanal wie Arte)</i>	359.25	S28
	Arte	359.25	S28
	SWR Fernsehen BW	535.25	K29
	VIVA <i>(gleicher Kanal wie Nick)</i>	238.25	S12
	Nick	238.25	S12
	BR	119.25	S03
	TSR 1	196.25	K08
	TSR 2	126.25	S04
	EuroNews	231.25	S11
	France 2	280.25	S18
	RSI la 1	217.25	K11
	RSI la 2	182.25	K06
	RAI UNO	252.25	S14
	ORF 2	259.25	S15
	CNN Int.	287.25	S19
	TV5 Monde Europe	168.25	S10
	MTV	311.25	S22
	Russia	679.25	K47
	WDR	791.25	K61
	N24	807.25	K63
	n-tv	815.25	K64
	MDR	823.25	K65
	Infokanal Urserntal	831.25	K66
	Schweiz 5	839.25	K67
	NDR	847.25	K68
	Canale 5	855.25	K69

Bei Funkstörung "ZDF" folgende Frequenz verwenden: 799.25 K62